

MAZDA B12AE: PASSENGER HEATED SEAT RELAY DRIVE CIRCUIT OPEN OR SHORTED TO GROUND

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$250-\$350
Can I Still Drive?	:	Yes (Short-term only)

What Does The Mazda B12AE Code Mean?

If the passenger heated seat relay drive circuit is open or shorted to ground and the HVAC module attempts to activate the passenger heated seat relay, the DTC will set and the seat will fail to heat or intermittently heat.

What Are The Potential Causes Of The Mazda B12AE Code?

- Wiring, terminals or connectors
- Heated seat relay
- Heated seat element
- HVAC module

Reference Sources

[Mazda B12AE](#), DTCDECODE.