

What Does The Mazda C1198 Code Mean?

Solenoid valve operation does not correspond to solenoid ON/OFF commands from the ABS or DSC HU/CM.

What Are The Potential Causes Of The Mazda C1198 Code?

- Solenoid valve malfunction
- Open or short circuit in the ABS or DSC HU/CM internal solenoid valves
- Poor connection at connectors (female terminal)

Reference Sources

Mazda C1198, DTCDECODE.

