

MAZDA U2616: WHEEL UNIT NO.1 (NO RESPONSE)

OVERVIEW

| | | |
|----------------------|---|------------------------------------|
| Severity | : | <div><div>Medium</div></div> |
| DIY Difficulty Level | : | <div><div>Intermediate</div></div> |
| Repair Cost | : | \$50-\$500 |
| Can I Still Drive? | : | Yes (Short-term only) |

What Does The Mazda U2616 Code Mean?

The keyless receiver has continuously not received a signal from the wheel unit for a certain period.

What Are The Potential Causes Of The Mazda U2616 Code?

- Wheel unit identification code is not registered in the instrument cluster.
- No signal is received from the wheel unit.
- Wheel unit is not installed.
- Poor connection at connectors (female terminal).

Reference Sources

[Mazda U2616](#), DTCDECODE.