

MINI P1692: MONITORING OF PROCESSOR CALCULATIONS

OVERVIEW

Severity	:	<div><div>Medium</div></div>
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$20-\$900
Can I Still Drive?	:	Yes (Short-term only)

What Does The MINI P1692 Code Mean?

Key on, engine running, the DME has detected that there is an error in the for the final request for disabled power stages of MTC and IV.

What Are The Potential Causes Of The MINI P1692 Code?

- Battery terminal corrosion, loose battery connection, or faulty
- Connection to the DME interrupted, or the circuit has been opened
- Reprogramming error has occurred
- and needs replacement.
- Voltage supply for Engine Control Module (DME) is faulty

Reference Sources

[MINI P1692](#), DTCDECODE.