

P044E: EXHAUST GAS RECIRCULATION SENSOR "C" CIRCUIT INTERMITTENT/ERRATIC

OVERVIEW

Severity	:	High
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$250-\$350
Can I Still Drive?	:	Yes

What Does The P044E Code Mean?

On board diagnostics (OBD) trouble code P044E is a generic trouble code relating to an intermittent or erratic problem incurred in the "C" electrical circuit to the exhaust gas recirculation (EGR) valve.

The purpose of the EGR valve is to introduce a regulated amount of exhaust gas into the intake manifold. The purpose is to maintain cylinder head temperatures below 2500-degrees F. Nitrates of Oxygen (Nox) form when temperatures rise above 2500-degrees F. Nox is responsible for smog and atmospheric pollution.

The controlling computer, either the powertrain control module (PCM) or the electronic control module (ECM) has detected an abnormally low, high or non-existent signal voltage. Refer to a manufacturer specific repair guide to determine which is the "C" sensor in your exact vehicle.

EGR Operating Principals

The trouble code P044E refers to the same problem on all vehicles, however, there are many types of EGRs, sensors and methods of activation. The only similarity is that they all vent exhaust gas into the intake manifold to cool the cylinder head temperatures.

Introducing spent exhaust gas into the engine at the wrong time reduces horsepower and causes a rough idle or stall. With this in mind, computer programming only opens the EGR when the engine

RPM is above 2000 and to close when under a load.

Related EGR sensor "C" trouble codes:

- [P044A Exhaust Gas Recirculation Sensor "C" Circuit](#)
- [P044B Exhaust Gas Recirculation Sensor "C" Circuit Range/Performance](#)
- [P044C Exhaust Gas Recirculation Sensor "C" Circuit Low](#)
- [P044D Exhaust Gas Recirculation Sensor "C" Circuit High](#)

What Are The Symptoms Of The P044E Code?

The symptoms depend on the position of the EGR pintle at the time of failure.

- The service engine soon light will illuminate and the OBD code P044E will be set. Additionally, a second code relating to the EGR sensor failure may be set. Code P044C relates to a low sensor voltage and P044D relates to a high voltage situation
- If the EGR pintle is stuck partly open, the vehicle will not idle well or stalls
- Ping from detonation may be heard when under a load or at high RPM
- No symptoms at all

What Are The Potential Causes Of The P044E Code?

- Defective EGR sensor "C"
- Defect in the wiring harness to the sensor
- EGR pintle stuck in the closed position and a build up of carbon is preventing it from opening
- Lack of vacuum to the EGR solenoid
- Defective EGR solenoid
- Defective EGR position sensor
- Defective differential pressure feedback EGR sensor.

How Can You Fix The P044E Code?

All EGR valves have one thing in common-they re-circulate exhaust from the exhaust to the intake manifold. Other than that, they differ in their methods for regulating the opening of the pintle and sensing its position.

The following repair procedures represent the most common problems accounting for the majority of failures in the EGR system. Wiring harness or sensor failures require a service manual to determine the proper wire identification and diagnostic procedures.

Keep in mind that the wiring differs between manufacturers and computers do not react well if the wrong wire is probed. If you probe the wrong wire and send excessive voltage through the computer's sensor input terminal and the computer will fry.

At the same time, if the wrong connector is disconnected the computer could lose its programming causing the vehicle to fail to start again until the dealer reprograms the computer.

- The code P044E indicates a "B" circuit malfunction, so check the EGR sensor connector for corrosion, bent or pushed out terminals or loose connection. Clean off any corrosion and re-seat the connector.
- Remove the electrical connector and remove the EGR. Check for coking in the EGRs intake and exhaust. Clean out any coking as necessary so the pintle will move up and down smoothly.
- Check the vacuum line from the EGR to the solenoid and replace it if any defects are found.
- Check the solenoid electrical connector for corrosion or defects.
- If the vehicle is a Ford, follow the two vacuum hoses from the EGR to the differential pressure feedback EGR sensor (DPFE) in the rear of the manifold.
- Check the two pressure hoses for corrosion. Experience dictates these hoses plug with carbon from the exhaust. Use a small pocket screwdriver or equivalent and clean the hoses of corrosion and the sensor will begin to operate again.

If the most common tests failed to solve the problem, a service manual is needed to continue to test the wiring circuits.

The best solution is to take the vehicle to a service facility with the proper diagnostic equipment. They can quickly identify and repair this type of problem.

Reference Sources

[P044E Exhaust Gas Recirculation Sensor C Circuit Intermittent](#), OBD-Codes.