

## P2042: REDUCTANT TEMPERATURE SENSOR CIRCUIT

### OVERVIEW

|                      |   |              |
|----------------------|---|--------------|
| Severity             | : | High         |
| DIY Difficulty Level | : | Advanced     |
| Repair Cost          | : | \$100-\$1150 |
| Can I Still Drive?   | : | Yes          |

### What Does The P2042 Code Mean?

A stored code P2042 means that the powertrain control module (PCM) has detected an abnormal degree of voltage in the reductant temperature sensor circuit. This code is exhibited in vehicles with a clean burning diesel engine, exclusively.

The catalyst system is responsible for reduction of (basically) all exhaust emissions although certain applications are also equipped with a NOx trap.

Exhaust gas recirculation (EGR) systems go another step further in the reduction of NOx. Nevertheless, today's larger and more powerful diesel engines cannot meet strict federal (U.S.) emission standards with the EGR, diesel particulate filter/catalytic converter, and NOx trap alone. It was for this reason that selective catalytic reduction (SCR) systems were invented.

SCR systems inject a reductant compound or a diesel exhaust fluid (DEF) into the exhaust in front of the diesel particulate filter, NOx trap, and/or the catalytic converter via the reductant injection valve (solenoid). The precisely timed DEF injection elevates the temperature of the filtration element and allows it to perform more efficiently.

It enhances filtration element longevity and allows fewer harmful exhaust emissions to be released into the atmosphere. The entire SCR system is monitored and controlled by either the PCM or a stand-alone controller (which interacts with the PCM). Either way, the controller monitors the O2, NOx, and exhaust temperature sensors (as well as other inputs) to determine the appropriate time

for DEF (reductant) injection. Precise DEF injection is necessary to maintain exhaust temperature within acceptable parameters and optimize pollutant filtration.

The reductant/regeneration supply pump is used to pressurize the DEF in the liquid reductant system for use, when required. Supply pump voltage is monitored by the PCM for consistent fluctuation and load percentage. The PCM also monitors one or more pressure sensors in the reductant supply system to determine if there is a leak in the system.

If the PCM detects a degree of voltage in the reductant temperature sensor circuit that is not within acceptable parameters, a code P2042 will be stored and a malfunction indicator lamp (MIL) may be illuminated. Multiple ignition cycles – with a failure – may be required for MIL illumination.

## What Are The Symptoms Of The P2042 Code?

Symptoms of a P2042 trouble code may include:

- Reduction in fuel efficiency
- Excessive black smoke from vehicle exhaust
- Diminished engine performance
- Other SCR related codes

## What Are The Potential Causes Of The P2042 Code?

Causes for this code may include:

- Defective reductant temperature sensor
- Open or shorted circuits in the reductant temperature sensor system
- Bad SCR controller/PCM or programming error

## How Can You Fix The P2042 Code?

A diagnostic scanner, a digital volt/ohmmeter (DVOM), and a source of vehicle specific diagnostic information will be required to diagnose a code P2042.

You may use your source of vehicle information to locate a technical service bulletin (TSB) that matches the vehicle year, make, and model; as well as the engine size, code/s stored, and symptoms exhibited. If you find one, it could yield helpful diagnostic information.

Use the scanner (connected to the vehicle diagnostic connector) to retrieve all stored codes and pertinent freeze frame data. It is a good idea to write this information down before clearing the codes then test-drive the vehicle until the PCM either enters readiness mode or the code is reset.

If the PCM enters readiness mode at this time, the code is intermittent and may be much more difficult to diagnose. If this is the case, the conditions which contributed to the code being stored

may need to worsen before an accurate diagnosis can be made.

If the code is immediately reset, the next step of your diagnosis will require that you search your vehicle information source for diagnostic flow-charts, connector pin-out charts, connector face views, and component testing procedures/specifications.

### Step 1

Use the DVOM to test the reductant temperature sensor according to manufacturer specifications. Components which do not test within maximum allowable parameters should be considered defective.

### Step 2

If actual reductant temperature is within specifications, the code P2042 persists, and the sensor in question is in working order, use the DVOM to test input and output signal circuits between the temperature sensor and the PCM/SCR controller. Disconnect all controllers prior to using the DVOM for testing.

- Reductant temperature sensor codes are usually attributed to a defective or disconnected sensor

### Severity Description

A stored code P2042 should be considered severe and addressed as quickly as possible. The SCR system could be disabled because of it. Catalyst damage could result if the conditions which contributed to the code being stored are not rectified in a timely fashion.

### Reference Sources

[P2042 Reductant Temperature Sensor Circuit](#), OBD-Codes.