

P2631: O2 SENSOR PUMPING CURRENT TRIM CIRCUIT HIGH BANK 2 SENSOR 1

OVERVIEW

Severity	:	Medium
DIY Difficulty Level	:	Advanced
Repair Cost	:	\$100-\$800
Can I Still Drive?	:	Yes (Short-term only)

What Does The P2631 Code Mean?

The P2631 OBDII trouble code is associated with the O2 Sensor Pumping Current Trim Circuit. When the Powertrain Control Module (PCM) detects a malfunction within the O2 Sensor Pumping Current Trim Circuit for the number one known as the upstream sensor, six different codes can be set.

These codes are [P2626](#), [P2627](#), [P2628](#), [P2629](#), [P2630](#) and [P2631](#) based on the specific signal that alerts the PCM to set the code and illuminate the Check Engine Light.

Code P2631 is set by the PCM when the O2 Sensor Pumping Current Trim Circuit for Bank 2 Sensor 1 is sending a higher voltage signal than normal. Bank 2 is the bank of the engine that does not contain cylinder #1.


What does an O2 sensor do?

The purpose of an O2 sensor is to monitor how much unburned oxygen is in the exhaust when it exits the engine. The PCM uses the signals sent from the O2 sensors to determine the oxygen levels in the exhaust.

These readings are utilized to control the fuel mixture. The PCM will adjust the fuel mixture accordingly when the engine is burning rich (less oxygen) or lean (more oxygen). All OBDII vehicles

incorporate a minimum of two O2 sensors, one before the catalytic converter (upstream) and one after (downstream).

An independent dual exhaust configuration will incorporate four O2 sensors. This P2631 code is associated with the upstream sensors located before the catalytic converter (sensor #1).

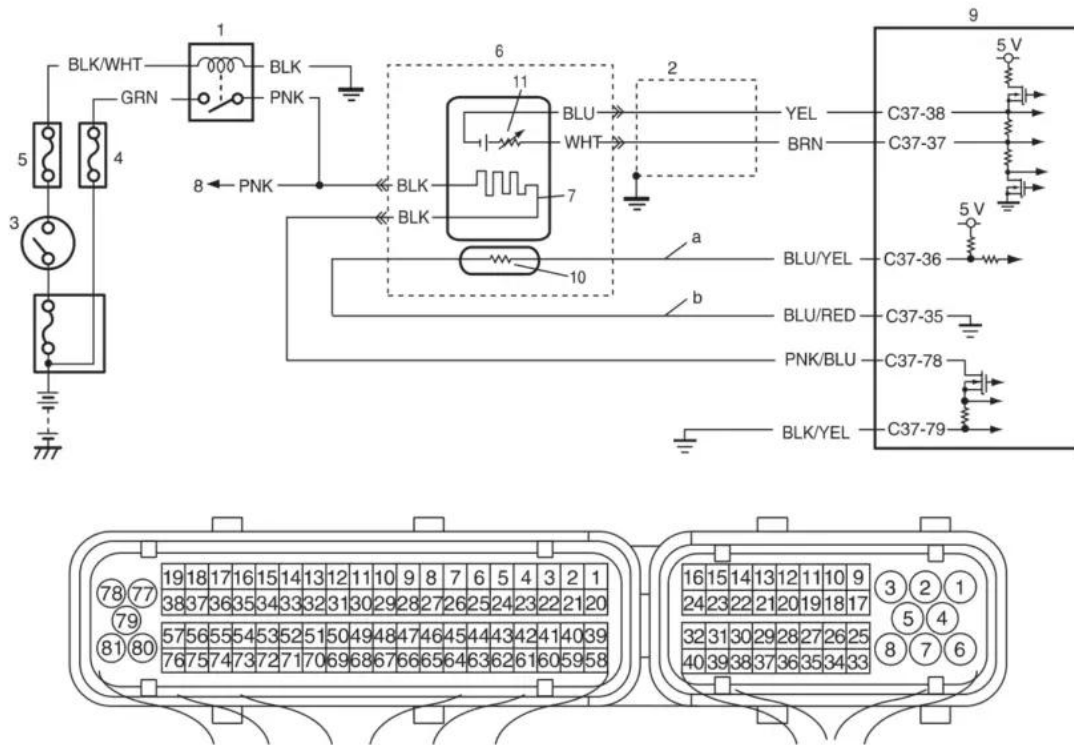

I6JB01110107-01

a. Adjusting resistor (+) circuit of A/F sensor (bank-1)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
b. Adjusting resistor (-) circuit of A/F sensor (bank-1)	4. O2 HTR fuse	8. To A/F sensor (bank-1), HO2S (bank-1 and -2)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	
2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)	

P2631 wiring diagram

What Are The Symptoms Of The P2631 Code?

Symptoms of a P2631 trouble code may include:

- Poor performance that progresses
- The engine will run lean
- The engine will run rich
- Check Engine Light illuminated
- Smoke from tailpipe
- Increased fuel consumption

What Are The Potential Causes Of The P2631 Code?

Possible causes of this code may include:

- Faulty O2 Sensor
- Carbon Buildup on O2 Sensor
- Blown fuse (if applicable)
- Fuel pressure too high
- Fuel pressure too low
- Vacuum leak on the engine
- Excessive exhaust leak
- Corroded or damaged connector
- Faulty or damaged wiring
- Faulty PCM

How Can You Fix The P2631 Code?

Check for TSBs

The first step in the troubleshooting process for any malfunction is to research the Technical Service Bulletins (TSB's) for the specific vehicle by year, model and power plant. In some circumstances this can save a lot of time in the long run by pointing you in the right direction.

The second step is to locate the O2 sensor before the catalytic converter. Perform a thorough visual inspection to check the associated wiring for obvious defects such as scraping, rubbing, bare wires, or burn spots.

Next is to check the connector for security, corrosion and damaged pins. With the engine running, the visual inspection should include identifying possible exhaust leaks. Based on the fuel consumption and the engine operation fuel pressure tests may be recommended. You should consult the specific tech data to determine this requirement.

Advanced Steps

The advanced steps become very vehicle specific and require the appropriate advanced equipment to perform accurately. These procedures require a digital multi meter and the specific technical references for the vehicle. Voltage requirements will very based of the specific year, model and engine in the vehicle.

Voltage Checks

When the fuel mixture is balanced at about 14.7 to 1 which is normal for most engines to achieve optimum performance, the sensor will read around 0.45 volts. An oxygen sensor will typically

generate up to about 0.9 volts when the fuel mixture is rich and there is unburned oxygen in the exhaust. When the mixture is lean, the sensor's output voltage will drop down to about 0.1 volts.

If this process identifies the absence of a power source or ground, continuity testing may be required to check the integrity of the wiring. Continuity tests should always be performed with the power removed from the circuit and the normal readings should be 0 ohms of resistance unless otherwise specified by the technical data. Resistance or no continuity is an indication of faulty wiring open or shorted and must be repaired or replaced.

Severity Description

The severity of this code is moderate, but will progress if not corrected in a timely manner.

Reference Sources

[P2631 O2 Sensor Pumping Current Trim Circuit High B2S1](#), OBD-Codes.