

P3483: CYLINDER 11 DEACTIVATION/INTAKE VALVE CONTROL CIRCUIT LOW

OVERVIEW

Severity	:	High
DIY Difficulty Level	:	Intermediate
Repair Cost	:	\$75-\$725
Can I Still Drive?	:	Yes

What Does The P3483 Code Mean?

<

OBD-II trouble code P3483 and related codes P3481, P3482, and P3484 are associated with the cylinder #11 deactivation/intake valve control circuit.

The purpose of the cylinder 11 deactivation/intake valve control circuit is to accommodate the cylinder deactivation feature (e.g. V4 mode of a V8 engine) to improve fuel economy during light load operation such as highway driving. The Engine Control Module (ECM) controls the 4 or 8 cylinder modes of the engine by engaging the intake deactivating solenoids for four of the engine cylinders. This code pertains to the number 11 cylinder and the other three cylinders in this process are determined by the engine configuration and the firing order of the cylinders. The number one cylinder deactivation solenoid is mounted on or near the intake in the vicinity of that cylinder based on the specific vehicle and the configuration.

When the ECM detects voltage or resistance within the cylinder 11 deactivation/intake valve control circuit that is too low, below the normal range threshold, code P3483 will be set and the check engine light, service engine soon light or both may be illuminated. In some circumstances, the ECM may disable the injector to the #11 cylinder until the issue is corrected and the code has been cleared causing a noticeable engine misfire.

Cylinder deactivation solenoids:

What Are The Symptoms Of The P3483 Code?

Symptoms of a P3483 trouble code may include:

- Engine may misfire
- Increased fuel consumption
- Poor engine performance
- Service engine soon light illuminated
- Check engine light illuminated

What Are The Potential Causes Of The P3483 Code?

Causes for this P3483 code may include:

- Defective cylinder deactivation solenoid
- Low engine oil level or pressure
- Restricted oil passage
- Faulty or damaged wiring
- Corroded, damaged or loose connector
- Defective ECM

How Can You Fix The P3483 Code?

The first step in the troubleshooting process for any malfunction is to research the Technical Service Bulletins (TSB's) for the specific vehicle by year, model and engine. In some circumstances, this can save a lot of time in the long run by pointing you in the right direction.

The second step is to check the condition of the engine oil and confirm it is serviced to the appropriate level. Then locate all components associated with the cylinder 11 deactivation intake valve control circuit and look for obvious physical damage. Based on the specific vehicle, this circuit may incorporate several components including the deactivation solenoid, switches, fault indicators and the ECM. Perform a thorough visual inspection to check the associated wiring for obvious defects such as scraping, rubbing, bare wires, or burn spots. Next is to check the connectors and connections for security, corrosion and damaged pins. This process must include all wiring connectors and connections to all components including the ECM. Consult the specific tech data for the vehicle to verify the configuration of the cylinder 11 deactivation/intake valve control circuit and confirm every component incorporated within the circuit which may include a fuse or a fuse-able link.

Advanced Steps

The advanced steps become very vehicle specific and require the appropriate advanced equipment to perform accurately. These procedures require a digital multi meter and the specific technical references for the vehicle.

Voltage Checks

The reference voltage and the acceptable ranges may vary based on the specific vehicle and the circuit configuration. Specific technical data will include troubleshooting charts and the appropriate sequence to follow assisting you with an accurate diagnosis.

If this process identifies the absence of a power source or ground, continuity testing may be required to check the integrity of the wiring, connectors and other components. Continuity tests should always be performed with the power removed from the circuit and the normal readings for wiring and connections should be 0 ohms of resistance. Resistance or no continuity is an indication of faulty wiring that is open, shorted or corroded and must be repaired or replaced.

Severity Description

The severity of this code can vary tremendously from moderate to severe depending on the specific symptoms of the malfunction. A misfire requires immediate attention because it can cause permanent damage to internal engine components.

Reference Sources

[P3483 Cylinder 11 Deactivation/Intake Valve Control Circuit Low](#), OBD-Codes.