

SUBARU P1532: BATTERY CHARGING SYSTEM

OVERVIEW

Severity	:	<div><div></div></div> High
DIY Difficulty Level	:	<div><div>Intermediate</div></div>
Repair Cost	:	\$350-\$400
Can I Still Drive?	:	Yes (Short-term only)

What Does The Subaru P1532 Code Mean?

Detect the output property and malfunction of battery current sensor. Judge as NG when there is no variation (stuck) under a condition where the battery current sensor output should have changed or when difference between output and battery current value is larger than expected (characteristics malfunction).

What Are The Potential Causes Of The Subaru P1532 Code?

- Faulty positive and/or negative terminals of battery
- Worn or loose V-belt
- Faulty battery
- Faulty generator
- Open/Short between ECM and generator connector
- Open/Short between ECM and battery current sensor connector
- Faulty battery current sensor

Reference Sources

[Subaru P1532](#), DTCDECODE.