

What Does The Volkswagen P3028 Code Mean?

Engine started, battery voltage must be at least 11.5v, all electrical components must be off, the ground between the engine and the chassis must be well connected, coolant temperature must be at least 80 degrees Celsius.

What Are The Potential Causes Of The Volkswagen P3028 Code?

- Throttle Position (TP) sensor is faulty
- Throttle valve control module is faulty
- ECM is fault
- Circuit wires have short circuited to each other, to vehicle Ground (GND) or to B+
- Accelerator pedal module is faulty

Reference Sources

Volkswagen P3028, DTCDECODE.

