



TOYOTA OBD1 TROUBLE CODES LIST

Compiled by ***OBDCodeX***



www.obdcodex.com

Code	Definition
Code 1	Normal Condition
Code 2	Air Flow Meter Signal
Code 3	Ignition Signal
Code 4	Engine Coolant Temperature Sensor Signal
Code 5	Oxygen Sensor
Code 6	Rpm Signal (Crank Angle Pulse)
Code 7	Throttle Position Sensor Signal
Code 8	Intake Air Temperature Sensor Signal
Code 9	Vehicle Speed Sensor Signal
Code 10	Starter Signal
Code 11	Switch Signal
Code 11	ECU/ECM
Code 12	Knock Control Sensor Signal/
Code 12	Rpm Signal
Code 13	Knock Control CPU (ECM)
Code 13	RPM Signal
Code 14	Turbocharger Pressure
Code 14	Ignition Signal
Code 16	Electronic Controlled A/T Signal

Code	Definition
Code 21	Oxygen Sensor
Code 22	Engine Coolant Temperature Sensor Signal
Code 23	Intake Air Temperature Sensor Signal
Code 24	Intake Air Temperature Sensor Signal
Code 25	Air-Fuel Ratio Lean
Code 26	Air-Fuel Ratio Rich
Code 27	Sub Oxygen Sensor Signal
Code 28	No. 2 Oxygen Sensor Signal
Code 31	Air Flow Meter Signal (Vacuum Sensor Signal)
Code 32	Air Flow Meter Signal
Code 34	Turbocharger Pressure Signal
Code 35	Turbocharger Pressure Sensor Signal
Code 35	Hac Sensor Signal
Code 41	Throttle Position Sensor Signal
Code 42	Vehicle Speed Sensor Signal
Code 43	Starter Signal
Code 51	Switch Signal
Code 52	Knock Sensor Signal
Code 53	Knock Sensor Signal

Code	Definition
Code 54	Inter-Cooler Ecm Signal
Code 55	Right Knock Sensor Signal
Code 71	EGR System
Code 72	Fuel Cut Solenoid Signal
Code 78	Fuel Pump Control Signal
Code 81	TCM Communication
Code 83	TCM Communication
Code 84	TCM Communication
Code 85	TCM Communication